

## **SHAPE**

### **Storage**

Montering hängande modul– Installation of hanging unit

Date:

2023-12-12

Nr:

00530283-A

# Montering hängande modul

*Installation of hanging unit*



Fig. 01

Montera bort eventuella luckor på de moduler som ska monteras samman för att underlätta vid montaget.  
*Remove any doors on the modules to be assembled together to facilitate assembly..*



Fig. 02



Fig. 03

För att kunna skruva samman modulerna så måste genomgående hål borras i sidorna. Detta med så stort avstånd från varandra som möjligt i de sammankopplande modulerna. Observera att beroende på utförande av lås (se fig. 02) och luckstorlekar så måste hänsyn tas till både låsbleck och gångjärn. I vissa fall går det bara att ha en skruv i den främre hålraden. Borra med Ø5mm borrh med Ø5mm borrh genom hålet i hålraden, 3-4st hål per sida.

*To be able to screw the modules together, through holes must be drilled in the sides. This with as great a distance from each other as possible in the connecting modules. Please note that depending on the design of the lock (fig. 02) and door sizes, both the lock plate and the hinge must be taken into account. In some cases, it is only possible to have one screw in the front row of holes. Drill with a Ø5mm drill through the hole in the row of holes, 3-4 holes per side.*



Fig. 04

Montera modulerna i varandra med skruvhylsan från den hängande enhetens håll. Skruva från andra modulens sida medföljande M4x20 skruv.

*Mount the modules into each other with the screw sleeve from the side of the hanging unit. Screw from the other module's side with the included M4x20 screw..*

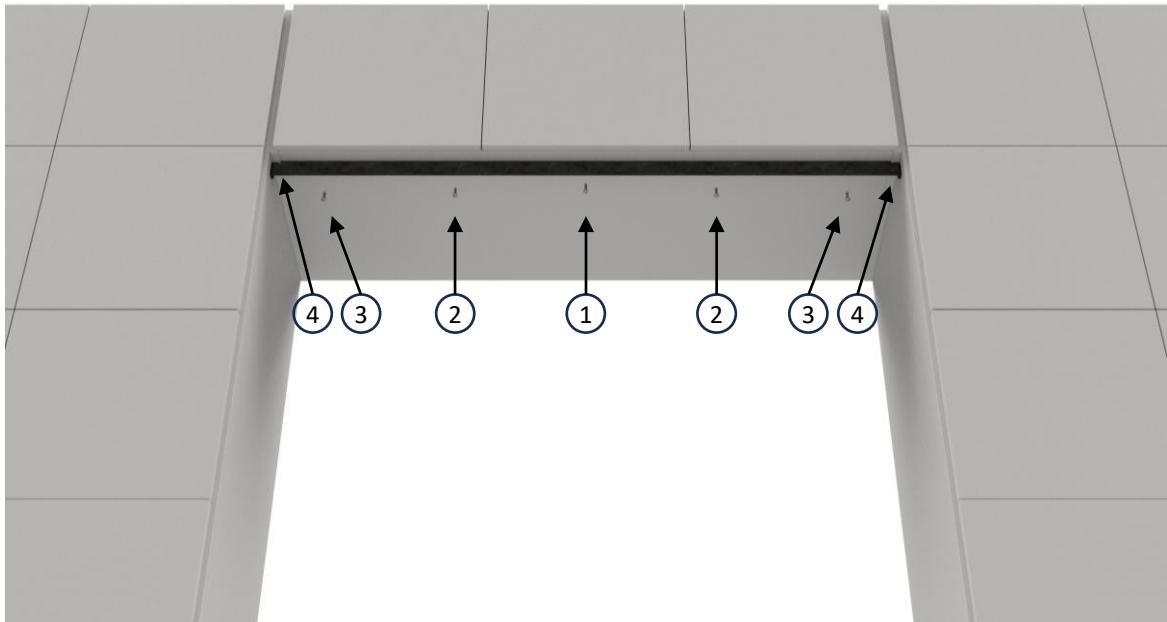


Fig. 05

När modulerna monterats ihop skall förstärkningsplåten i metall monteras ca 25mm från ytterkant med medföljande skruv 5,0x16mm. Börja med skruven i mitten och fortsätt därefter ut mot varje ände. Avsluta med de skruvar som skruvas in i sidan på intilliggande modul.

*When the modules have been assembled together, the metal reinforcement plate must be mounted approx. 25mm from the outer edge with the included screw 5.0x16mm. Start with the screw in the middle and then continue out towards each end. Finish with the screws that are screwed into the side of the adjacent module.*



Fig. 06

Montera därefter dekorlisten på samma sätt som förstärkningsplåten. Börja med hålet i mitten och gå ut mot ändarna.

*Then mount the decorative strip in the same way as the reinforcement plate. Start with the hole in the middle and work your way out to the ends..*